Product code

18-508-BK-TK









Item Desciption	Cosiloft 100 Black and Teak Fire Pit Table
Barcode	8712757455317
Factory	GIME002
Country of Origin	China
Assembly Required	Yes
Testing Details	CE
Packaging Materials	Carton and styrofoam
Mail Order Packaging	Yes
Colour Group	Natural
Aerocover	18-508-C
Web Description	The Cosiloft Black Fire Table with Teak Wood combines the Cosi Fire Pit With a square coffee table surround. It has an easy use, electronic ignition that works on battery. There is space for up to a 5KG gas bottle, in a hidden compartment in the coffee table, ensuring a stylish heat source well into the night. Whilst we do offer a weatherproof cover to fit the Cosiloft 100 Black And Teak, we would not recommend using these on the teak topped tables. Teak is a hardwood and as such, completely happy in the atmosphere and will age naturally and beautifully when left to the elements. As your Cosi product is completely weatherproof, you can confidently leave it uncovered. The cover, glass surround and cover plate are all sold separately. You can order these with the below codes. Cosiglass Set Square Fire Pit: Large 18-504
	Cosi Cover Plate Glass Set: Large 18-516-L

Single Item Dimensions (CM) (KG)		
Width	100	
Depth	100	
Height	48	
Weight	28	
Single Item Colour		
Frame/Item	Black/ Teak	
Fabric		
Single Item Materials		
Item/Frame	Aluminium and Teak	
Fabric		
Additional Details		
Supplier part number: 5957860		

Product code

Battery Information		
Are Batteries Included	Yes	
Type of Batteries	1.5 V, AA	
Qty of Batteries	1	

18-508-BK-TK

Packaging Details (CM) (KG)		
Number of Product Boxes	2	
Product Box 1		
Content	1 Cosiloft 100 black frame including black burner, lava rocks, top plate for burner, 4 pcs ceramic wood logs, gas hose and regulator, manual and battery	
Width	108	
Depth	108	
Height	56	
Weight	30	
Product Box 2		
Content	1 Cosi table top teak 100x100cm	
Width	106	
Depth	106	
Height	9	
Weight	14.5	
Item Labels Positions		
UKCA/CE Symbol	On product, label and manual	
Polybag Warnings	Yes	
Care Instructions		

Maintenance instructions Cosi Teak items Congratulations on the purchase of your Cosi! Read these user and maintenance instructions very carefully. With these maintenance tips in mind you will be able to enjoy your Cosi for many years to come. Teak is a product from nature and lives its own life: it shrinks and expands, creating spaces between the various glued parts. This is due to the air humidity. By exposing Teak to weather effects, the Teak wood will develop its own grey colour when the Teak wood is not protected with a protector. During use circles and spots cannot be prevented and the formation of cracks in the Teak is inevitable. Teak slats will never remain 100% flat, creating unique features such as the curling upwards on the corners of the table. These are characteristics of the type of wood. Due to the strong construction you will be able to enjoy it for many years to come Maintenance instructions 1. It is not recommended to cover the Teak top, this can cause ugly sites. Do you prefer to use a protection cover? Please keep in mind that Teak wood is never in direct contact with the protection cover. You can place the glass set between cover and Teak top for example, to avoid the cover touching the Teak wood. Avoid stagnant water on top of the protection cover. - Ventilate the firepit on a regular basis by removing the cover from the table. - If the cover is used incorrectly on the Teak wood, mould stains can occur. 2. Do not place objects on the Teak wood for long time. Think of flowerpots, vases, drink glasses and accessories. These objects could cause circles and stains. Use coasters if possible. 3. Treat the Teak wood regularly with Teak shield, Teak protector, or Teak grey wash. Teak wood maintenance Teak shield By applying a layer of Teak shield, you can make your teak and hardwood water and dirt repellent to ensure longterm protection and to prevent stains. Teak shield is an almost invisible wood impregnator that makes it difficult for wine, olive oil or butter to seep into the Teak. This product helps to prevent stains while keeping the natural look of the surface. In addition, the Teak shield allows moisture vapour transmission and is included with builtin mould and mildew inhibitor. You only need to apply Teak Shield a few times a year. For maximum results, treat the tabletop a few times more. Teak protector Teak wood has the natural effect of turning grey after some time outside. If you want to keep the natural brown Teak colour, you can treat the Teak tabletop with a Teak protector. With a Teak protector the tabletop will maintain the golden brown colour of Teak for a longer time. Teak grey wash Do you like an aged look? Teak grey wash turns brown Teak wood into old, grey Teak wood. We strongly recommend treating the surface with Teak shield to prevent stains. Always read the instructions of the maintenance product very carefully, we recommend using the products of Golden Care. Cleaning advice 1. Never use a high-pressure cleaner to clean the Teak. This will cause the Teak to break and feel rough. 2. Preferably clean the Teak wood on a rainy day, this makes it easier to clean it because the dirt has already been soaked and loosened. You can also make the Teak wood thoroughly wet by yourself. 3. Dissolve a cup of table salt in a bucket of lukewarm water. 4. Scrub the Teak wood with the salt water and a stiff brush. 5. Rinse the Teak with copious amounts of water. 6. Afterwards when the Teak is completely dry, you can choose to treat the Teak with Teak Protector, Teak shield of Teak grey wash. 7. Always read the instructions on the packaging of the maintenance product very carefully.