Product code

18-520-WH-TK











Item Desciption	Cosiloft 120 White and Teak Fire Pit Table
Barcode	8712757459070
Factory	GIME002
Country of Origin	China
Testing Details	CE
Packaging Materials	Carton, ppe
Colour Group	Natural
Aerocover	18-520-C
Web Description	Finished in a teak wood top and white metal frame, the Cosiloft Coffee Table takes up to a 5KG gas canister (not supplied) and creates a great focal point for your outdoor lounging area. Also available with a concrete effect top and black frame, or a teak wood top with a black frame.
	Whilst we do offer a weatherproof cover to fit the Cosiloft 120 White And Teak, we would not recommend using these on the teak topped tables. Teak is a hardwood and as such, completely happy in the atmosphere and will age naturally and beautifully when left to the elements. As your Cosi product is completely weatherproof, you can confidently leave it uncovered.
	The cover, glass surround and cover plate are sold separately. You can order these with the below codes.
	Cosi Straight Glass Set: 18-525
	Cosi Cover Plate Oblong for straight glass set: 18-516-OB

Single Item Dimensions (CM) (KG)		
Width	120	
Depth	80	
Height	47	
Weight	26	
Single Item Colour		
Frame/Item	white/ Teak	
Fabric		
Single Item Materials		
Item/Frame	Aluminium/ teak	
Fabric		
Additional Details		
Supplier part number: 5958760		

Product code

Battery Information		
Are Batteries Included	Yes	
Type of Batteries	1.5 V, AA	
Qty of Batteries	1	

18-520-WH-TK

Packaging Details (CM) (KG)		
Number of Product Boxes	2	
Product Box 1		
Content	1 Cosiloft 120 white frame including stainless steel burner, lava rocks, top plate for burner, 3 pcs ceramic wood logs, gas hose and regulator, manual and battery	
Width	127	
Depth	87	
Height	55.5	
Weight	28	
Product Box 2		
Content	1 Cosi table top teak 120x80cm	
Width	126	
Depth	86	
Height	9	
Weight	15.5	
Item Labels Positions		
UKCA/CE Symbol	on product and on labels	
Care Instructions		

With these maintenance tips in mind you will be able to enjoy your Cosi for many years to come. Teak is a product from nature and lives its own life: it shrinks and expands, creating spaces between the various glued parts. This is due to the air humidity. By exposing Teak to weather effects, the Teak wood will develop its own grey colour when the Teak wood is not protected with a protector. During use circles and spots cannot be prevented and the formation of cracks in the Teak is inevitable. Teak slats will never remain 100% flat, creating unique features such as the curling upwards on the corners of the table. These are characteristics of the type of wood. Due to the strong construction you will be able to enjoy it for many years to come Maintenance instructions 1. It is not recommended to cover the Teak top, this can cause ugly sites. Do you prefer to use a protection cover? Please keep in mind that Teak wood is never in direct contact with the protection cover. You can place the glass set between cover and Teak top for example, to avoid the cover touching the Teak wood. Avoid stagnant water on top of the protection cover. - Ventilate the firepit on a regular basis by removing the cover from the table. - If the cover is used incorrectly on the Teak wood, mould stains can occur. 2. Do not place objects on the Teak wood for long time. Think of flowerpots, vases, drink glasses and accessories. These objects could cause circles and stains. Use coasters if possible. 3. Treat the Teak wood regularly with Teak shield, Teak protector, or Teak grey wash. Teak wood maintenance Teak shield By applying a layer of Teak shield, you can make your teak and hardwood water and dirt repellent to ensure longterm protection and to prevent stains. Teak shield is an almost invisible wood impregnator that makes it difficult for wine, olive oil or butter to seep into the Teak. This product helps to prevent stains while keeping the natural look of the surface. In addition, the Teak shield allows moisture vapour transmission and is included with builtin mould and mildew inhibitor. You only need to apply Teak Shield a few times a year. For maximum results, treat the tabletop a few times more. Teak protector Teak wood has the natural effect of turning grey after some time outside. If you want to keep the natural brown Teak colour, you can treat the Teak tabletop with a Teak protector. With a Teak protector the tabletop will maintain the golden brown colour of Teak for a longer time. Teak grey wash Do you like an aged look? Teak grey wash turns brown Teak wood into old, grey Teak wood. We strongly recommend treating the surface with Teak shield to prevent stains. Always read the instructions of the maintenance product very carefully, we recommend using the products of Golden Care. Cleaning advice 1. Never use a high-pressure cleaner to clean the Teak. This will cause the Teak to break and feel rough. 2. Preferably clean the Teak wood on a rainy day, this makes it easier to clean it because the dirt has already been soaked and loosened. You can also make the Teak wood thoroughly wet by yourself. 3. Dissolve a cup of table salt in a bucket of lukewarm water. 4. Scrub the Teak wood with the salt water and a stiff brush. 5. Rinse the Teak with copious amounts of water. 6. Afterwards when the Teak is completely dry, you can choose to treat the Teak with Teak Protector, Teak shield of Teak grey wash. 7. Always read the instructions on the packaging of the maintenance

product very carefully.

Maintenance instructions Cosi Teak items
Congratulations on the purchase of your Cosi! Read these user and
maintenance instructions very carefully.