

Product code

18-521-WH-TK



Item Description	Cosiloft 120 Relaxed Dining White and Teak Fire Pit Table
Barcode	8712757463770
Factory	GIME002
Country of Origin	China
Testing Details	CE
Packaging Materials	Carton, ppe
Colour Group	Natural
Aerocover	18-521-C
Web Description	<p>The Cosiloft 120 Relaxed Dining table has a built-in fire pit for those atmospheric summer evenings with friends and family. Easy to use with an electronic ignition, this fire pit table takes up to a 5KG gas canister (not supplied) which can be hidden away in a special compartment under the table. Please note there is an additional plate (not supplied) that sits on top of the glass surround to protect the ceramic logs.</p> <p>Whilst we do offer a weatherproof cover to fit the Cosiloft 120 Relaxed Dining White And Teak, we would not recommend using these on the teak topped tables. Teak is a hardwood and as such, completely happy in the atmosphere and will age naturally and beautifully when left to the elements. As your Cosi product is completely weatherproof, you can confidently leave it uncovered.</p> <p>The glass surround and cover plate are all sold separately. You can order these with the below codes.</p> <p>Cosi Straight Glass Set: 18-525</p> <p>Cosi Cover Plate Oblong for Straight Glass Set: 18-516-OB</p>

Single Item Dimensions (CM) (KG)	
Width	120
Depth	80
Height	67
Weight	28
Single Item Colour	
Frame/Item	white/ Teak
Fabric	
Single Item Materials	
Item/Frame	Aluminium/ teak
Fabric	
Additional Details	
Supplier part number: 5980190	

Product code

18-521-WH-TK

Battery Information

Are Batteries Included	Yes
Type of Batteries	1.5 V, AA
Qty of Batteries	1

Packaging Details (CM) (KG)

Number of Product Boxes	3
Product Box 1	
Content	1 Cosiloft 120 relax dining white frame including stainless steel burner, lava rocks, top plate for burner, 3 pcs ceramic wood logs, gas hose and regulator, manual and battery
Width	68
Depth	50
Height	75
Weight	24.5
Product Box 2	
Content	1 Cosiloft 120 relax dining table top frame white for table top 120x80cm
Width	127
Depth	87
Height	10
Weight	5
Product Box 3	
Content	1 Cosi table top teak 120x80cm
Width	126
Depth	86
Height	9
Weight	15.5
Item Labels Positions	
UKCA/CE Symbol	on product and on labels
Care Instructions	

Maintenance instructions Cosi Teak items

Congratulations on the purchase of your Cosi! Read these user and maintenance instructions very carefully.

With these maintenance tips in mind you will be able to enjoy your Cosi for many years to come.

Teak is a product from nature and lives its own life: it shrinks and expands, creating spaces between the various glued parts. This is due to the air humidity. By exposing Teak to weather effects, the Teak wood will develop its own grey colour when the Teak wood is not protected with a protector. During use circles and spots cannot be prevented and the formation of cracks in the Teak is inevitable. Teak slats will never remain 100% flat, creating unique features such as the curling upwards on the corners of the table. These are characteristics of the type of wood. Due to the strong construction you will be able to enjoy it for many years to come

Maintenance instructions

1. It is not recommended to cover the Teak top, this can cause ugly sites. Do you prefer to use a protection cover? Please keep in mind that Teak wood is never in direct contact

with the protection cover. You can place the glass set between cover and Teak top for example, to avoid the cover touching the Teak wood.

- Avoid stagnant water on top of the protection cover.

- Ventilate the firepit on a regular basis by removing the cover from the table.

- If the cover is used incorrectly on the Teak wood, mould stains can occur.

2. Do not place objects on the Teak wood for long time. Think of flowerpots, vases, drink glasses and accessories. These objects could cause circles and stains. Use coasters if possible.

3. Treat the Teak wood regularly with Teak shield, Teak protector, or Teak grey wash.

Teak wood maintenance

Teak shield

By applying a layer of Teak shield, you can make your teak and hardwood water and dirt repellent to ensure longterm protection and to prevent stains. Teak shield is an almost invisible wood impregnator that makes it difficult for wine, olive oil or butter to seep into the Teak. This product helps to prevent stains while keeping the natural look of the surface. In addition, the Teak shield allows moisture vapour transmission and is included with builtin mould and mildew inhibitor. You only need to apply Teak Shield a few times a year. For maximum results, treat the tabletop a few times more.

Teak protector

Teak wood has the natural effect of turning grey after some time outside. If you want to keep the natural brown

Teak colour, you can treat the Teak tabletop with a Teak protector. With a Teak protector the tabletop will maintain the golden brown colour of Teak for a longer time.

Teak grey wash

Do you like an aged look? Teak grey wash turns brown Teak wood into old, grey Teak wood. We strongly recommend treating the surface with Teak shield to prevent stains.

Always read the instructions of the maintenance product very carefully, we recommend using the products of

Golden Care.

Cleaning advice

1. Never use a high-pressure cleaner to clean the Teak. This will cause the Teak to break and feel rough.

2. Preferably clean the Teak wood on a rainy day, this makes it easier to clean it because the dirt has already been soaked and loosened. You can also make the Teak wood thoroughly wet by yourself.

3. Dissolve a cup of table salt in a bucket of lukewarm water.

4. Scrub the Teak wood with the salt water and a stiff brush.

5. Rinse the Teak with copious amounts of water.

6. Afterwards when the Teak is completely dry, you can choose to treat the Teak with Teak Protector, Teak shield or Teak grey wash.

7. Always read the instructions on the packaging of the maintenance product very carefully.