## Product code

## 18-522-TK





Item Desciption	Cosiscoop Pillar Teak Lantern	
Barcode	8712757464166	
Factory	GIME002	
Country of Origin	China	
Testing Details	CE	
Packaging Materials	Carton, ppe	
Colour Group	Natural	
Aerocover	18-522-C	
Web Description	This striking floor standing lantern pillar is great for making pathways or surrounding your outdoor lounge area. Standing over one metre tall, these hurricanes will create a dramatic light source and backdrop whilst you relax in your outdoor space. They are easy to use with the electric ignition, you'll be the new style guru in town! Available in teak and black, both styles are topped with a glass surround. The lantern comes complete with a 37mbar UK regulator. This lantern required a 5KG propane gas bottle (not included with the lantern).  Whilst we do offer a weatherproof cover to fit the Cosiscoop Pillar Teak, we would not recommend using these on the teak. Teak is a hardwood and as such, completely happy in the atmosphere and will age naturally and beautifully when left to the elements. As your Cosi product is completely weatherproof, you can confidently leave it uncovered	

Single Item Dimensions (CM) (KG)		
Width	39	
Depth	39	
Height	106	
Weight	17	
Single Item Colour		
Frame/Item	Teak	
Fabric		
Single Item Materials		
Item/Frame	teak	
Fabric		
	Additional Details	
Supplier part number: 5980340		

## Product code

Battery Information				
Are Batteries Included	No			

## 18-522-TK

Packaging Details (CM) (KG)			
Number of Product Boxes	1		
Product Box 1			
Content	Cosiscoop Pillar, pebble stones, glass		
Width	92.7		
Depth	44		
Height	45		
Weight	18		
Item Labels Positions			
UKCA/CE Symbol	on product and on labels		
Care Instructions			

With these maintenance tips in mind you will be able to enjoy your Cosi for many years to come. Teak is a product from nature and lives its own life: it shrinks and expands, creating spaces between the various glued parts. This is due to the air humidity. By exposing Teak to weather effects, the Teak wood will develop its own grey colour when the Teak wood is not protected with a protector. During use circles and spots cannot be prevented and the formation of cracks in the Teak is inevitable. Teak slats will never remain 100% flat, creating unique features such as the curling upwards on the corners of the table. These are characteristics of the type of wood. Due to the strong construction you will be able to enjoy it for many years to come Maintenance instructions 1. It is not recommended to cover the Teak top, this can cause ugly sites. Do you prefer to use a protection cover? Please keep in mind that Teak wood is never in direct contact with the protection cover. You can place the glass set between cover and Teak top for example, to avoid the cover touching the Teak wood. Avoid stagnant water on top of the protection cover. - Ventilate the firepit on a regular basis by removing the cover from the table. - If the cover is used incorrectly on the Teak wood, mould stains can occur. 2. Do not place objects on the Teak wood for long time. Think of flowerpots, vases, drink glasses and accessories. These objects could cause circles and stains. Use coasters if possible. 3. Treat the Teak wood regularly with Teak shield, Teak protector, or Teak grey wash. Teak wood maintenance Teak shield By applying a layer of Teak shield, you can make your teak and hardwood water and dirt repellent to ensure longterm protection and to prevent stains. Teak shield is an almost invisible wood impregnator that makes it difficult for wine, olive oil or butter to seep into the Teak. This product helps to prevent stains while keeping the natural look of the surface. In addition, the Teak shield allows moisture vapour transmission and is included with builtin mould and mildew inhibitor. You only need to apply Teak Shield a few times a year. For maximum results, treat the tabletop a few times more. Teak protector Teak wood has the natural effect of turning grey after some time outside. If you want to keep the natural brown Teak colour, you can treat the Teak tabletop with a Teak protector. With a Teak protector the tabletop will maintain the golden brown colour of Teak for a longer time. Teak grey wash Do you like an aged look? Teak grey wash turns brown Teak wood into old, grey Teak wood. We strongly recommend treating the surface with Teak shield to prevent stains. Always read the instructions of the maintenance product very carefully, we recommend using the products of Golden Care. Cleaning advice 1. Never use a high-pressure cleaner to clean the Teak. This will cause the Teak to break and feel rough. 2. Preferably clean the Teak wood on a rainy day, this makes it easier to clean it because the dirt has already been soaked and loosened. You can also make the Teak wood thoroughly wet by yourself. 3. Dissolve a cup of table salt in a bucket of lukewarm water. 4. Scrub the Teak wood with the salt water and a stiff brush. 5. Rinse the Teak with copious amounts of water. 6. Afterwards when the Teak is completely dry, you can choose to treat the Teak with Teak Protector, Teak shield of Teak grey wash. 7. Always read the instructions on the packaging of the maintenance product very carefully.

Maintenance instructions Cosi Teak items
Congratulations on the purchase of your Cosi! Read these user and
maintenance instructions very carefully.